

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS FOR LED EXIT/EMERGENCY COMBO UNIT

IMPORTANT SAFEGUARDS


READ AND FOLLOW ALL SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

WARNING: RISK OF ELECTRIC SHOCK- NEVER CONNECT TO, DISCONNECT FROM, OR SERVICE WHILE EQUIPMENT IS ENERGIZED.

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE - For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations.


- All service shall be performed by qualified service electrician. This product must be installed and maintained in accordance with the applicable installation codes by a person familiar with the construction & operation of the product and the hazards involved.
- This product must be installed in accordance with the applicable installation codes and ordinances.
- Before wiring to power supply, turn off electricity at fuse or circuit breaker.
- Disconnect A. C. power and unplug battery before servicing.
- Consult your local building code for approved wiring and installation.
- Do not let power supply cord touch hot surfaces.
- Do not mount near gas or electric heater.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than intended use.
- Connect to an AC voltage as recommended on the product label of this equipment.

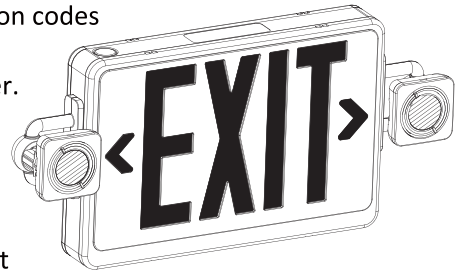

Wiring Diagrams:

Note: Cap off UNUSED input/remote lamp lead(s)

Standard

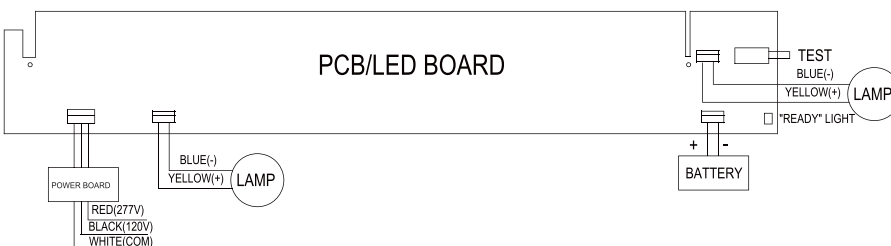

Remote capable



CAUTION: DO NOT connect YELLOW and BLUE remote leads together. Please also ensure remote head positive (+) lead is connected to COMBO unit's yellow lead (+) and remote head negative (-) lead is connected to COMBO unit's blue lead (-).

SAVE THESE INSTRUCTIONS!

INSTALLATION INSTRUCTIONS

Operation:

The battery in this unit may not be fully charged. After electricity is connected to the unit for at least 24 hours, then normal operation of this unit should take effect. To check, press the "TEST" button. The EXIT sign should stay illuminated and the LED lamps on the unit should turn ON.

In accordance with NFPA 101, your emergency lighting system must be tested monthly for a minimum of 30 seconds and annually for 90 minutes. Refer to your local codes for any additional requirements that may apply. When re-lamping, use only LED lamps specified in the fixture. Using other lamp types may result in damage or unsafe conditions.

Removing directional Indicators (chevrons):

- a. Gently pop out the color diffuser lens from the unit's faceplate(s).
- b. Using your fingers or a soft tool, tap/knock out the desired chevron from its position.
- c. Replace the color diffuser lens onto the faceplate.

Single-to-double face conversion:

1. Pushing out the snap-on clips, gently slide out the backplate insert from the unit's housing.
2. Slide in the 2nd faceplate into the opening and snap-close it to complete the conversion.

WALL MOUNT INSTALLATION (single-face units only)

1. Turn off AC power and remove the faceplate of the EXIT section.
2. Refer to the "Removing Directional Indicators" section to remove the appropriate chevron(s) from the faceplate when required.
3. Remove the appropriate knockouts in the backplate of the unit to fit junction box mounting points. **Note:** These knockouts are not intended for use with Conduit fittings.
4. Feed the power supply module input wires from the sign through the 7/8" opening in the center of the backplate. Route the wires along the side walls of the sign enclosure to ensure proper sign illumination and to protect wires from damage.
5. Connect building supply wires to the power supply module input wires and feed splices into the junction box. Refer to the "Wiring Diagrams" section for wiring instructions. Cap off the unused input lead.
6. Attach the backplate to the junction box using the screws provided.
7. After AC power can be continuously supplied, push in connector from battery to the LED board.
8. Reattach the faceplate to the sign enclosure to finish installation.

TOP OR END MOUNT INSTALLATION:

1. Turn off AC power and remove the faceplate of the EXIT section.
2. Refer to the "Removing Directional Indicators" section to remove the appropriate chevron(s) from the faceplate when required.
3. Secure the mounting canopy to the sign enclosure after removing the appropriate mounting hole cover. For end-mount installation, remove a lamphead from the unit and attach the mounting canopy in its place.
4. Feed the power supply module input wires from the sign through the opening in the mounting canopy and the mounting bracket. Route the wires along the side walls of the sign enclosure to ensure proper sign illumination and to protect wires from damage.
5. Connect building supply wires to the power supply module input wires and feed splices into the junction box. Refer to the "Wiring Diagrams" section for wiring instructions. Cap off the unused input lead.
6. After AC power can be continuously supplied, push in connector from battery to the LED board.
7. Reattach the faceplate to the sign enclosure.
8. Attach the mounting bracket to the junction box using the screws provided.
9. Securely attach the mounting canopy to the mounting bracket to finish installation.

Note: UL recommended maximum mounting height is 14-ft

SAVE THESE INSTRUCTIONS!

INSTALLATION INSTRUCTIONS

INSTRUCTIONS FOR SELF-DIAGNOSTIC TEST:

Once the unit is properly installed according to the installation instruction sheet and AC power supplied, the dual color LED indicator will come ON and the self-diagnostic test function will automatically initiate. Unit will switch into a load calibrating mode for 5-10 seconds to record the connected load. Connected lampheads and EXIT sign (when applicable) will turn ON during this step. After the load calibration has been completed, the LED indicator will show either a RED/GREEN flashing (battery hi-charge mode) OR STEADY GREEN (battery trickle charge mode) status. FLASHING GREEN indicates that the unit is in manual or self-test mode. RED (steady or flashing) indicates a service alert. Refer to the SERVICE INDICATION chart below for more details. The LED indicator would be OFF when the unit is in emergency mode.

During a manually-initiated test OR monthly/annual self-diagnostic test, if the calibrated load is not detected, then the LED indicator will flash THREE or FOUR times, indicating a load failure error. This error code can be reset by pressing and holding the test switch for at least (6) seconds, allowing the unit to calibrate the load again.

SELF-DIAGNOSTIC SERVICE

The self-diagnostic function is factory preset and performs the following:

- Monitoring of battery, charger, LED board (when applicable) and lamp heads (when applicable).
- Self-testing and a 30-second or longer discharge once every 30 days, after AC power has been supplied for a minimum of 24 hours.
- Self-testing and a 30-minute or longer discharge once every 180 days, after AC power has been supplied for a minimum of 24 hours.
- Self-testing and a 90-minute or longer discharge once every 365 days, after AC power has been supplied for a minimum of 24 hours.

SERVICE INDICATION

LED Indicator	Status
One Flash Red	Replace Electronics
Two Flash Red	Replace Battery
Three Flash Red	Replace LED board (when applicable)
Four Flash Red	Replace lamp head (when applicable)
Five Flash Red	Replace Remote lamp (when applicable)
Steady Red	Connect Battery
Solid Green	Trickle Charge mode
Flashing Green	In test mode
Red/Green Flashing	High Charge mode

MANUAL TESTING

The unit also provides for manual testing by pressing the test button in a specific pattern

Action	Reaction & LED Indication
Push test button thrice (within 2 secs)	90-minute discharge test; FLASHING Green
Push test button twice (within 2 secs)	30-minute discharge test; FLASHING Green twice
Push test button once (within 2 secs)	30-second discharge test; FLASHING Green thrice
Push test button and hold for 3 seconds (in test mode)	Self-discharge test is canceled; If this is done, then a manual test of the same duration is recommended to be done to ensure compliance
Push test button and hold for 6 seconds (in error mode)	System is reset; Unit will recalibrate the load connected

WARNING:

- Ensure that power is OFF before making any electrical connections
- Unused wires must be capped off using enclosed wire nuts