 


USER MANUAL CL-TRL12RGB | 12' LED COLOR CHANGING ROPE LIGHT

REMOTE CONTROL OPERATION:

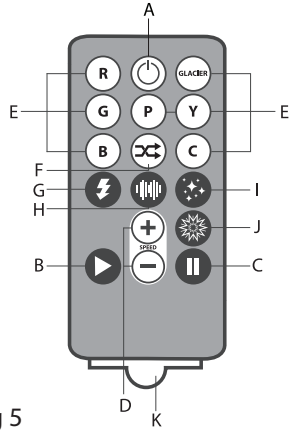

- A. Power - Toggles power On and Off
- B. Play - Cycle through colors in Flash, Fade, Sparkle, and Twinkle Modes
- C. Pause - Stops play button operation
- D. Speed Control - Changes speed interval from play button from 4 to 8 seconds between changes
- E. Color Models - R (Red), G (Green), B (Blue), Glacier (Cool White), Y (Yellow), P (Purple), C (Greenish-Blue)
- F. Multi-Colors
- G. Flash - Cycles current color On and Off
- H. Fade - Current color Increases and Decreases light
- I. Twinkle - Creates a Twinkling Effect of the current color
- J. Sparkle - Creates a Sparkle Effect of the current color
- K. Battery Pull Tab - This must be removed for remote to function

Fig 5

CARE FOR YOUR PRODUCT:

Your product will last for many years with minimum care. Therefore, it is essential to clean the product periodically. **Turn the product off**, then use a soft, non-abrasive cloth. It is essential NOT to use any solvents or harsh cleaning agents.

TROUBLE SHOOTING:

The light does not come on:

- A) Make sure the wall switch and circuit breaker are on
- B) Check the connections for the adapter, connectors and power plug to ensure they are properly connected

EYES:



- **DO NOT look directly at the LED lights.**
- **DO NOT remove the LED lights protective covering.**

WARRANTY:



This product has a **two-year limited warranty** from the date of purchase. This guarantees against failure due to factory defects, whether caused by materials or workmanship. The warranty is non-transferable and only pertains to the original purchaser. Proof of purchase is required for any repair or replacement, so please keep your proof of purchase receipt. This warranty does not cover normal wear and tear or damage due to misuse. Misuse of this product includes but is not limited to:

- Using outdoors in extreme weather conditions.
- Opening the product's housing.
- Any attempts to update, remodel or fix the unit yourself.

If you have questions or are missing parts, please contact customer service at 1-888-745-4837



**LINKABLE
UP TO 180'**

USER MANUAL CL-TRL12RGB | 12' LED COLOR CHANGING ROPE LIGHT



- (AA) (1) 12' Rope Light
- (BB) (1) Power Adaptor/Remote Receiver
- (CC) (1) Remote Control
- (DD) (10) Mounting Clip
- (EE) (10) Screws
- (FF) (10) Zip Tie

If you have questions or are missing parts, please contact customer service at 1-888-745-4837

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product. Please save this instruction manual.

WARNING

- Risk of electric shock: turn power off before installing.
- This rope light must be installed in a dry, open location only.
- **CAUTION:** To reduce the risk of fire, do not install more than 2 rope lights in spaces smaller than 12 inches by 12 inches by 12 inches.
- Use only plastic ties to secure power cord.
- Not intended for recessed installation in ceilings, or recessed soffits.
- The National Electrical Code (NEC) does not permit cords to be concealed where damage to insulation may go unnoticed. To prevent fire danger, do not run cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted.
- This product is not a toy. Do not store or leave this rope light in a location accessible to young children.
- Do not install this rope light near or in heat-producing appliances.
- Risk of fire hazard, only connect a maximum of the TOTAL length.

CL-TRL12RGB - LINKABLE UP TO 180'

- Ensure NOT to exceed the above maximum total length.
- If this unit is installed in an outdoor location, the power plug (BB) must be fully covered by an certified outdoor covering for use in for a wet location.

CAUTION

- Remove batteries from the remote control (CC) to prevent product damage when the product is not used for a long period of time.
- Batteries must be inserted in the correct position.
- Do not throw batteries into fire or expose them to excess heat.


PREPARATION

- Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the products. Contact customer service for replacement parts.
- Tools required for assembly (not included):
 - Phillips screwdriver • Safety glasses • Ladder • Scissors

ASSEMBLY INSTRUCTIONS



1. MEASURE: Lay out the installation. Ensure the mounting surface is clean and free of any debris or residue.

2. PLUG THE ROPE LIGHT TO THE POWER ADAPTOR: **First, ensure the power adaptor is not plugged into an electrical socket.** Connect the rope light (AA) to the power adaptor (BB), making sure to match the two prongs in the rope light (AA) into the two holes in the power adaptor (BB). Twist the nozzle (GG) onto the power cord end (HH) until the fit is secure (Fig 1).

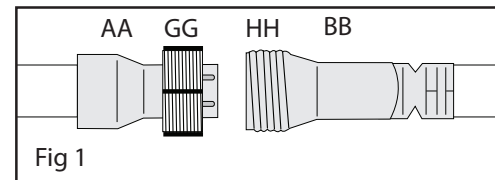


3. MOUNT: Use the mounting clips (DD) with the screws (EE) and/or zip ties (FF) to mount the rope light to the desired surface.

A) Using a screw (EE), secure the mounting clip (DD) to the desired surface making sure it is in a direction that the rope light (AA) can snap into (Fig 2). Repeat. Snap the rope light (AA) into each mounting clip (DD) (Fig 3).

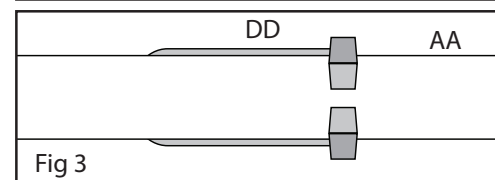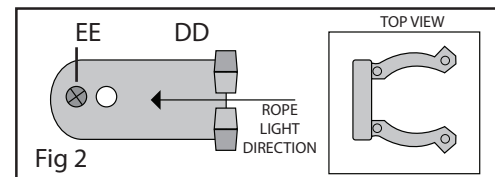

B) Use a zip tie (FF) to secure the rope light (AA) to the desired surface (Fig 4). Make sure to zip tie (FF) the rope light (AA) to a surface that makes the rope light (AA) tight and secure. Repeat.

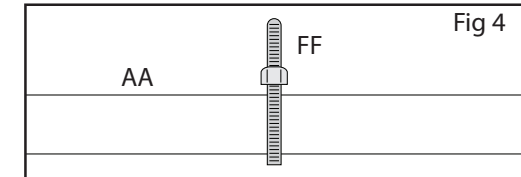

Plug the power to the wall socket. Your rope light and remote are now ready to use.

To use the remote control (CC), ensure you are no more than 25 feet away from the power adaptor/remote receiver (BB). See Fig 5 on Page 4 for remote features.