

## **BEFORE YOUR FIRST USE, PLEASE CHARGE AND DISCHARGE THE BATTERIES**

### **Charging:**

- Completely charge the batteries before your first use the lamp.
- The lamp must be charged every three months to protect the battery lifetime.
- Use the included dual head USB-C cable to charge the lamps.
- The battery charging status can be determined by reading the battery status. If all 4 LEDs are lit, the battery is fully charged.
- Use the USB (Type A) port on each lamp to charge external devices such as your phone.


### **Usage:**

The on-off switch

- Press one time : Main LED 50%
- Press second time : Main LED 100%
- Press third time : OFF

### **Diagram:**

1. Telescopic bracket
2. Bracket fixing seat
3. Shockproof circle
4. Aluminum tube fixing sleeve
5. Aluminum Tube
6. Damping Rotor
7. LED head

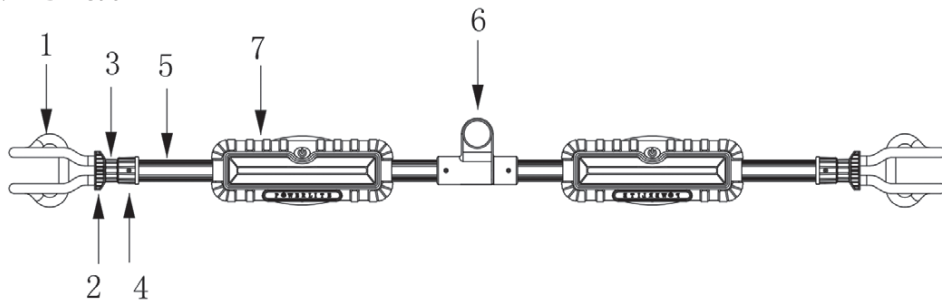

### **CARE FOR YOUR PRODUCT:**

This product has a **two-year limited warranty** from the date of purchase—this guarantees against failure due to factory defects, whether caused by materials or workmanship. The warranty is non-transferable and only pertains to the original purchaser. Proof of purchase is required for any repair or replacement, so please keep your proof of purchase receipt. This warranty does not cover normal wear and tear or damage due to misuse. Misuse of this product includes but is not limited to:

- Using outdoors in extreme weather conditions.
- Opening the product's housing.
- Any attempts to update, remodel or fix the unit yourself.



If you have questions or are missing parts, please contact customer service at 1-888-745-4837



### **CAUTION:**

- This product is not waterproof and is designed for dry use only.
- Avoid environments with extreme dust and/or humidity.
- Avoid areas with temperatures higher than 104 Fahrenheit.
- Avoid using this product near flammable materials and/or gas.

### **EYES:**



- **DO NOT look directly at the LED lights.**
- **DO NOT remove the LED lights protective covering.**



If you have questions or are missing parts, please contact customer service at 1-888-745-4837

**ADDITIONAL WARNINGS:**



- This product is not waterproof and is designed for dry use only.
- DO NOT use on radiant heated surfaces.
- DO NOT remove the lens protecting the LED.
- DO NOT open the product. It is NOT possible to change the LED lights or source.
- DO NOT use near a gas source.
- This product is not intended for use in possible explosive areas. It should never be in an area of exposure to vapor elements.
- This product is NOT a toy and should stay out of children's hands.
- It is important to keep the unit at least 16 feet away from wet areas such as pools, spas, or standing water.

**TECHNICAL DATA:**

LED	2* 10W COB Light Heads
CRI	75
Lumen	2* 1200lm Light Heads
Battery	2* 3.7V 4400mAh Li-ion
Charging period	Approx 4.5-5 hours
Usage period	Approx 3 hours lighting for switch at high setting Approx 7 hours lighting for switch at low setting



Rotates 180-degrees (Vertically)



Rotates 360-degrees (Horizontally)



Magnetic



Extendable mounting  
Bracket between  
51"-75"